


HIKVISION INTERCOM – HOW TO CHANGE KEYPAD CODES VIA THE INDOOR STATION


‘Settings’

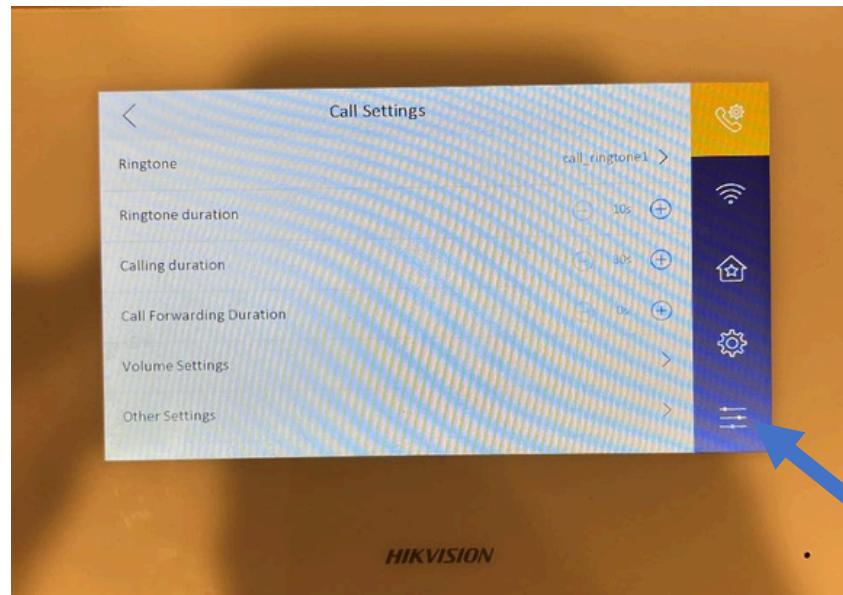

‘Advanced Settings’



‘Configuration’

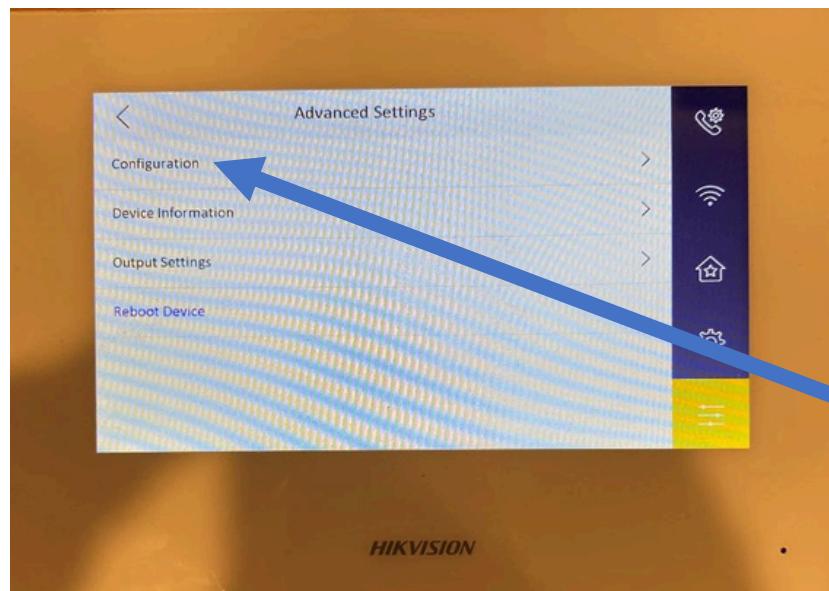


Enter Password (Your installer will provide this to you)




Note: Do not change any other settings in this menu except for those instructed. Doing so could cause your intercom to stop working.


'Device Management'

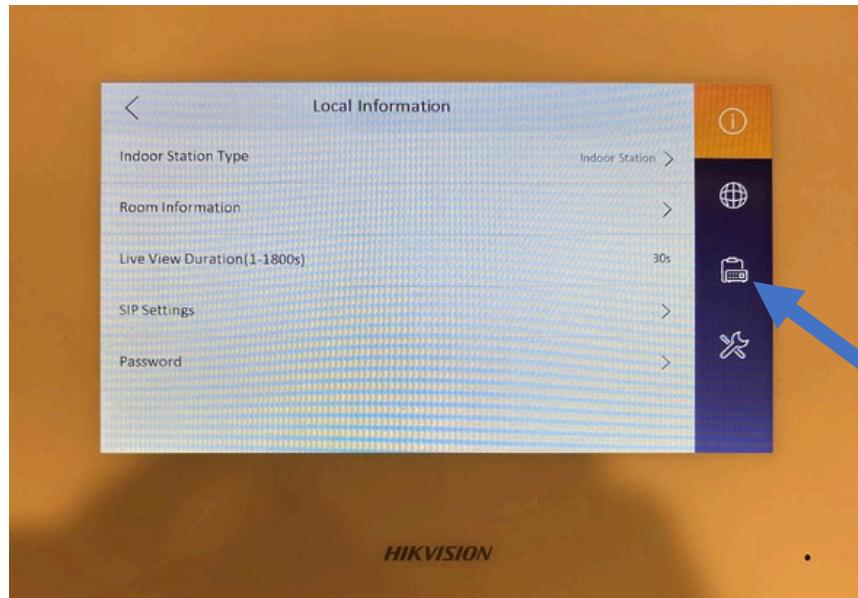


'Main Door Station (D Series)'

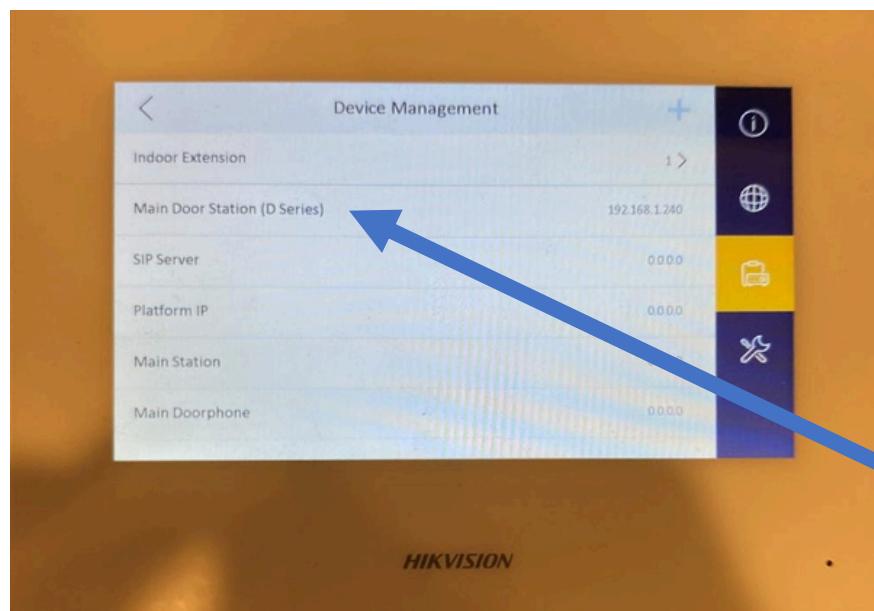


'Settings' Cog

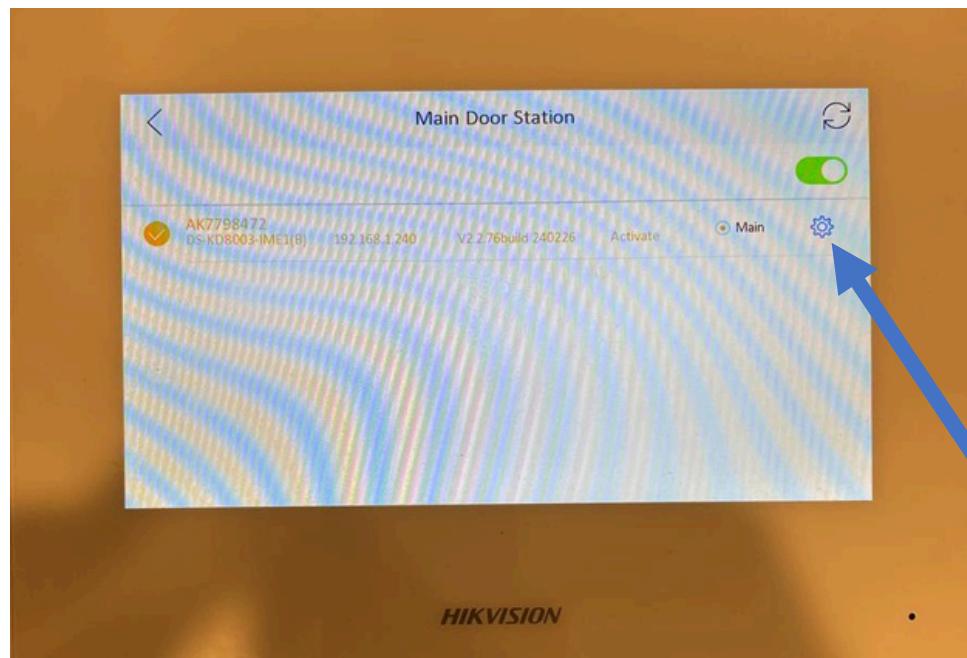

Scroll down on the screen

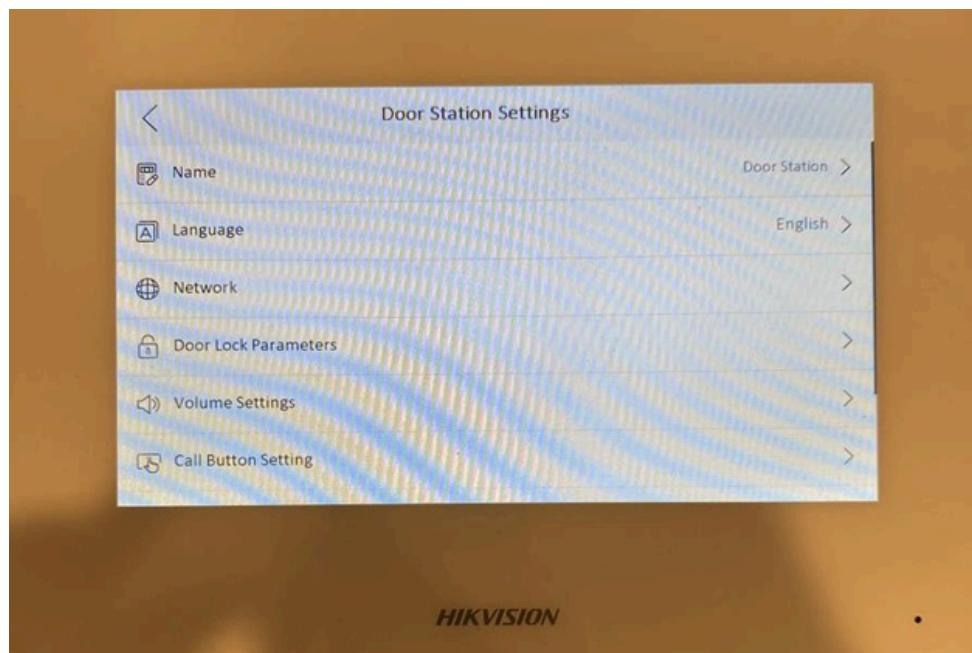

'Public Password'

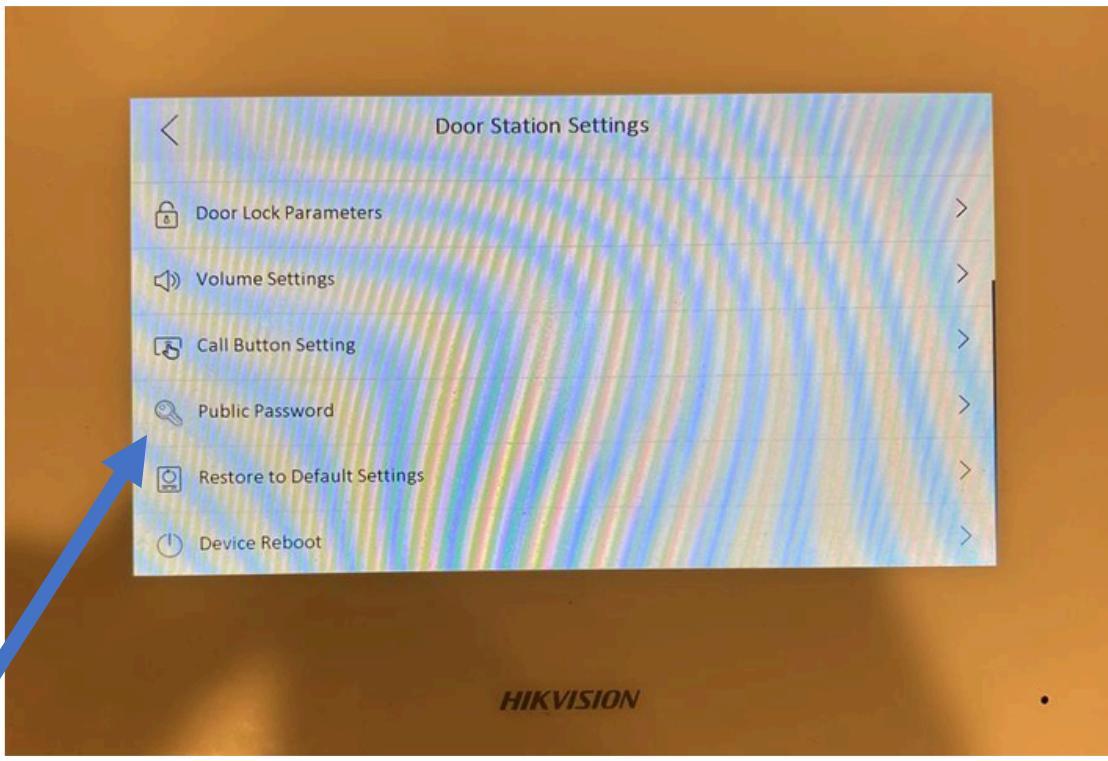


SEE NEXT PAGE

You can enter up to 16 unique codes.

Each code is assigned to either 'Door 1' or 'Door 2'.

Enter the 4 Digit Code you require, then press 'OK'.

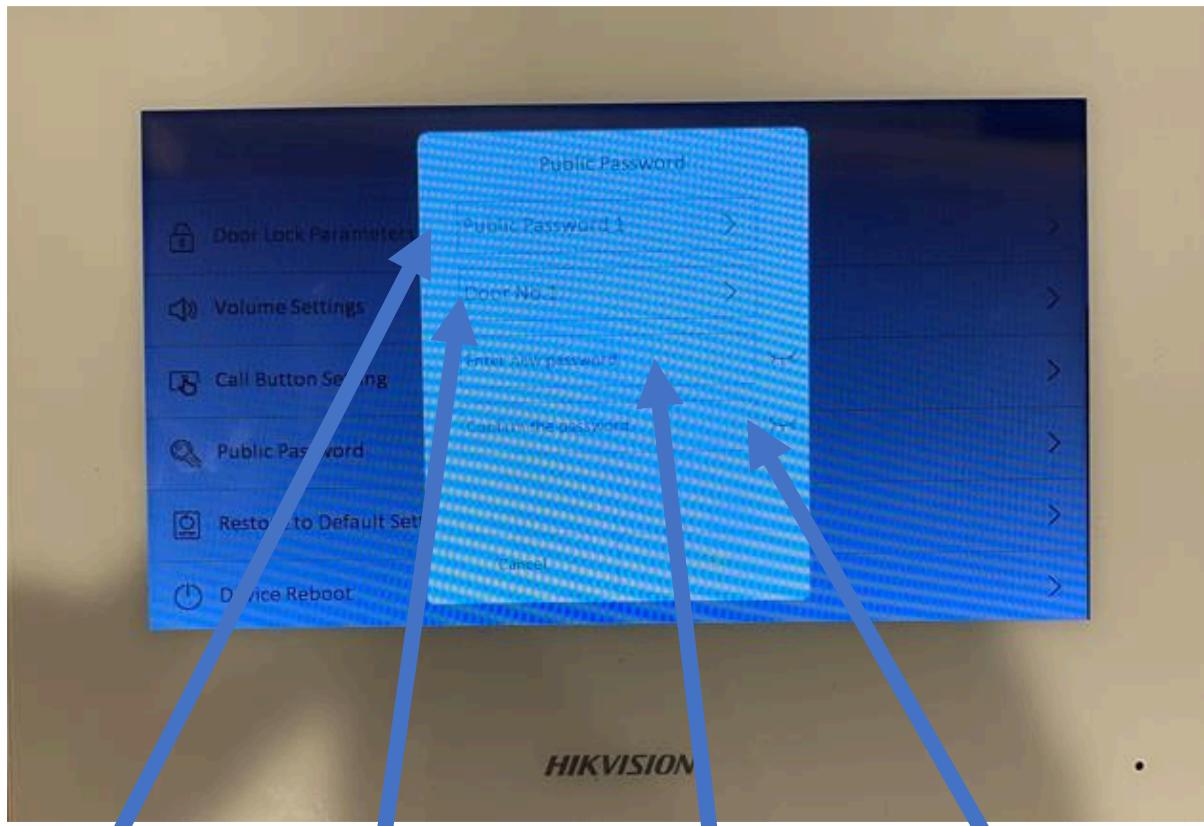

Code
1-16

Which Door
(Door 1 or 2)

4-Digit
Code

Confirm 4-Digit
Code

Note:

When entering the code on the keypad, use # CODE #