

LIVE GUARD SETUP



HOW TO SET UP LIVE GUARD IN NVR AND HIK-CONNECT APP WITH NEW BASELINE FIRMWARE FROM LOCAL NVR

Function Explanation


Live Guard Function is used to notify the user when cctv detect any suspicious event by flash light alarm and send push notification to Hik-connect APP.

Device information


Device type	Model	Version
Network Video Recorder	DS-7604NI-M1 / 4P	V5.04.065_build250530
IP Camera	DS-2CD2387G2H-LISU/SL	V5.7.19 build 241207

Configuration


Step 1: Log in to the NVR local monitor, You will enter a page like this: Click the bottom right button to quit Full screen.

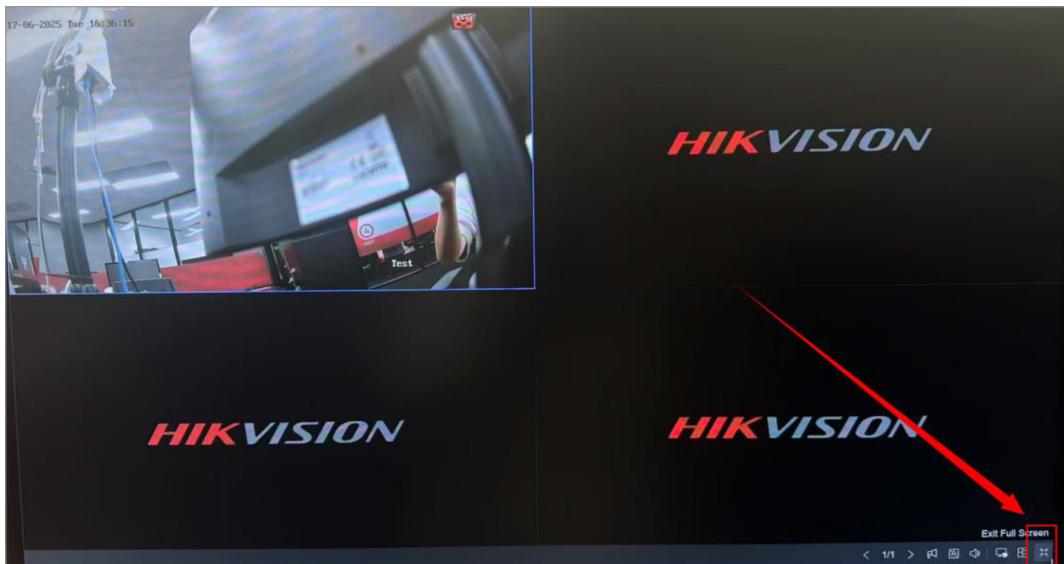


Step 2: Click here and enter Home page.

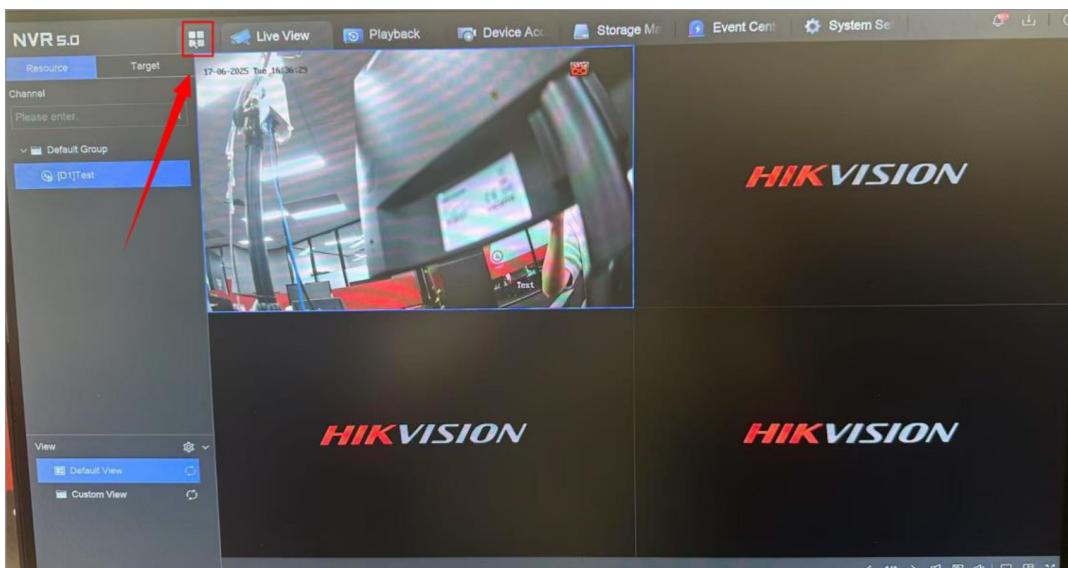


Step 3: Select Event Configuration.

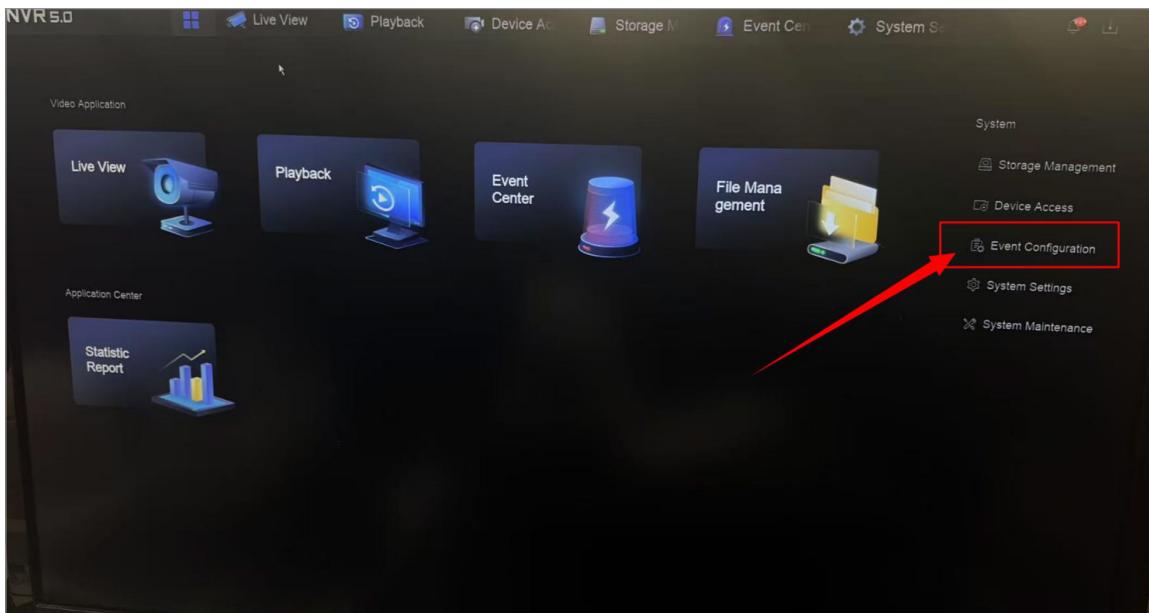


Step 4: Go to Event Configuration -> Perimeter Protection : Enable the Line crossing/Intrusion event. Draw the detection area and max/min size.

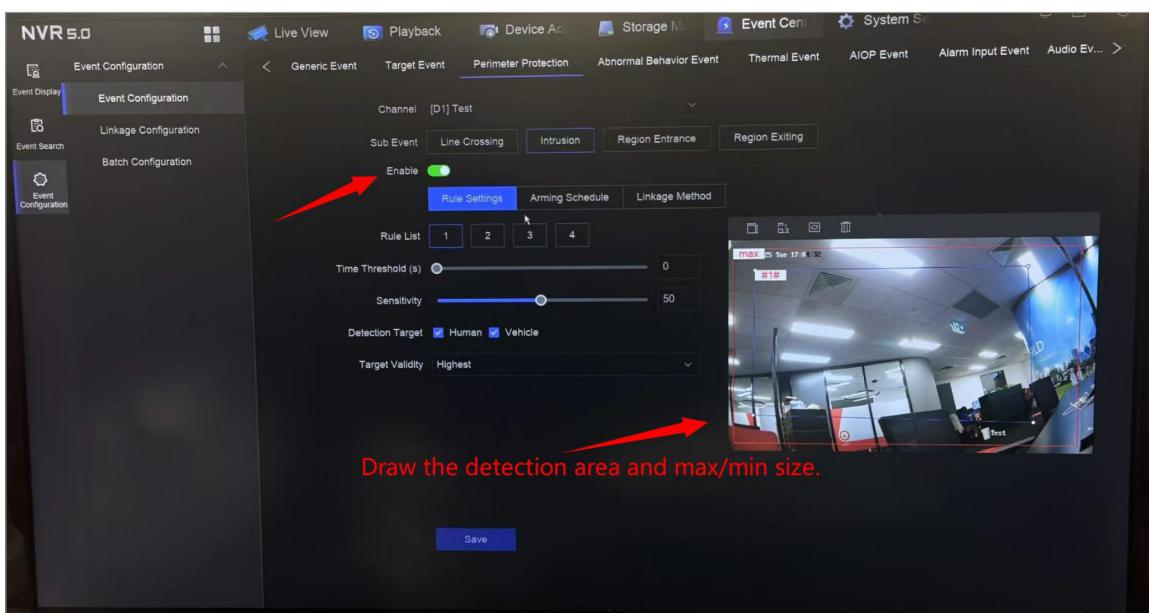


Step 5: Go to Linkage method, Enable Notify Surveillance Center, Tick Light and Audio Alarm Linkage and Save the settings.

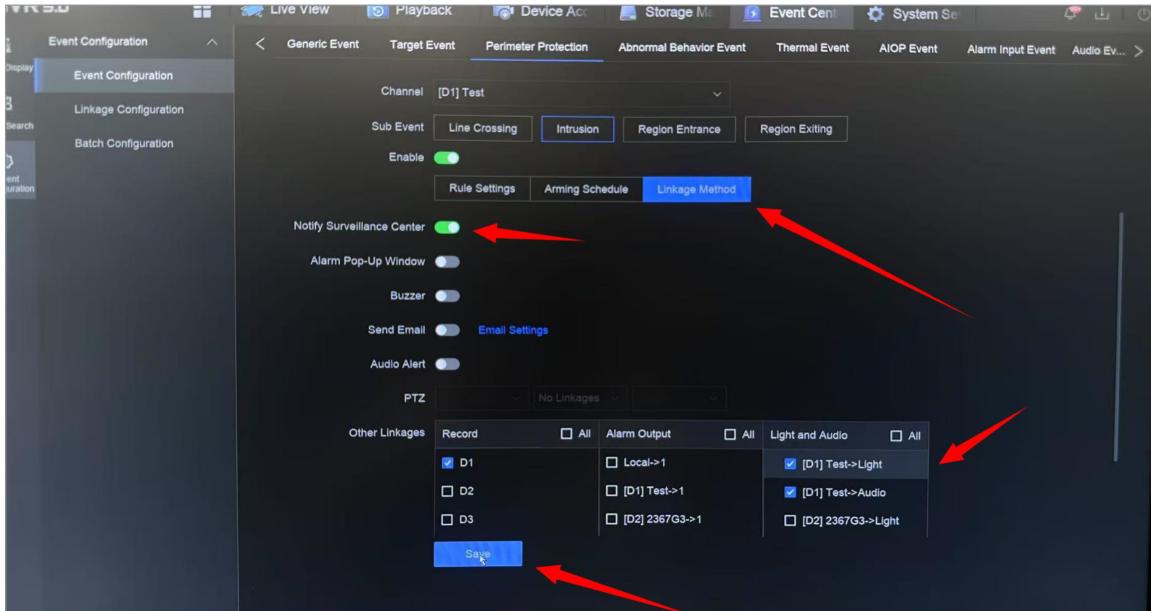


Step 6: Once the NVR is connected with Hik-connect app, you will see a shield icon on the screen (refer to the following screenshot). Click it and you will be able to arm/silent arm and disarm via APP.

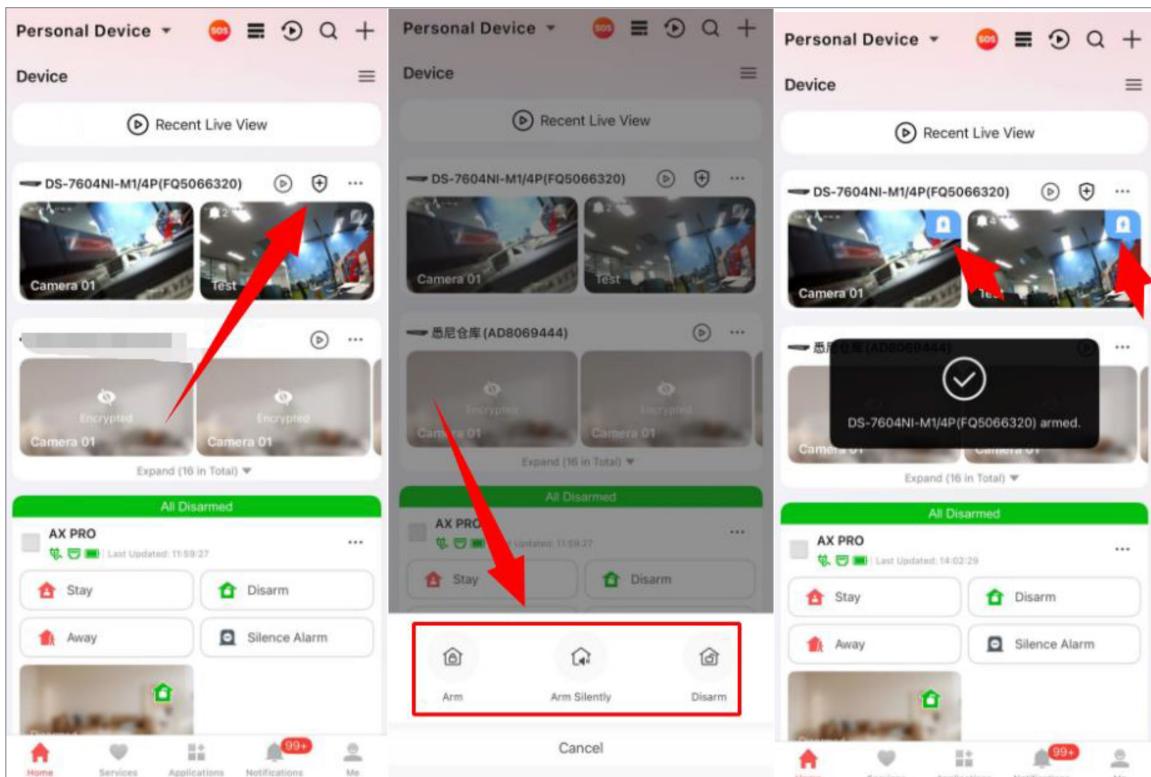

Step 7 (Area Setting): We can create different area via the APP, click the “...”on the device and select arm/disarm area, tap the + sign on the top left corner to add an area.

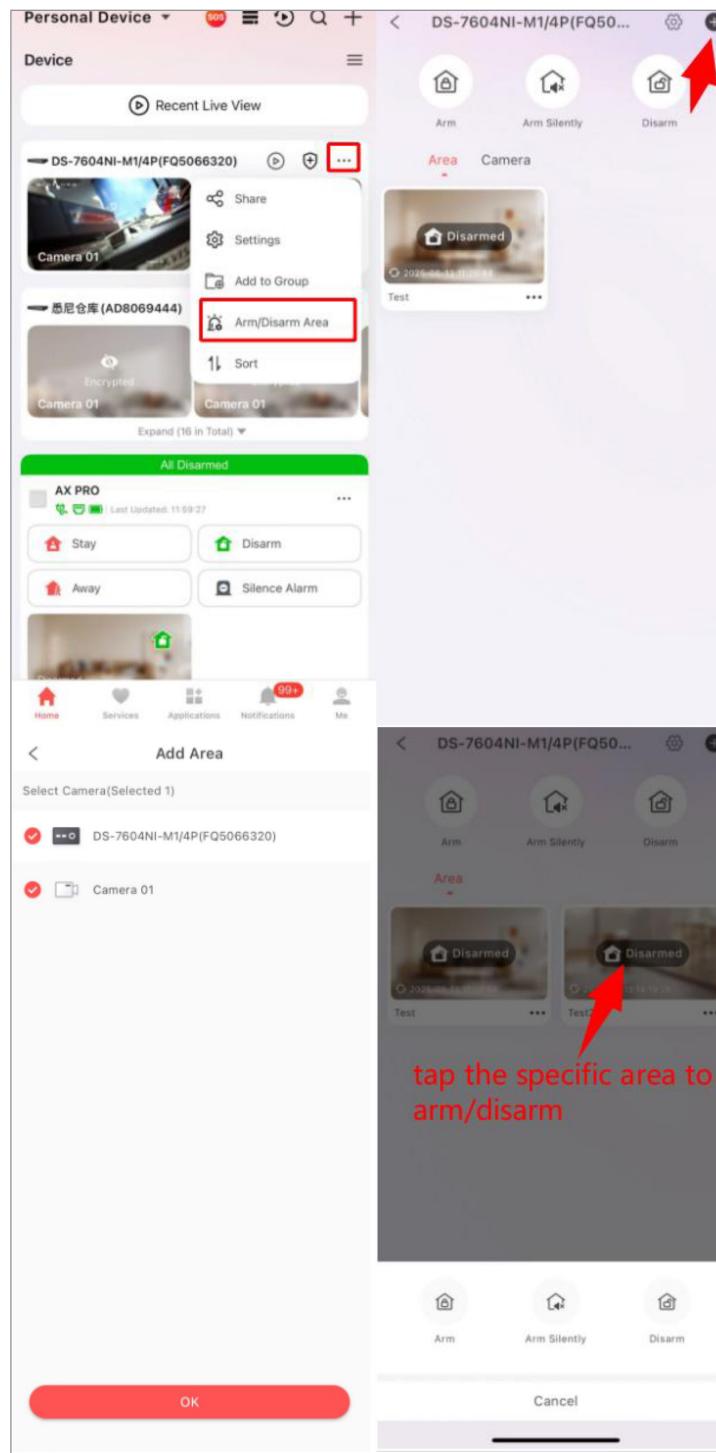


Step 8 (Linkage setting): We can configure the linkage setting for each camera channel via the APP.

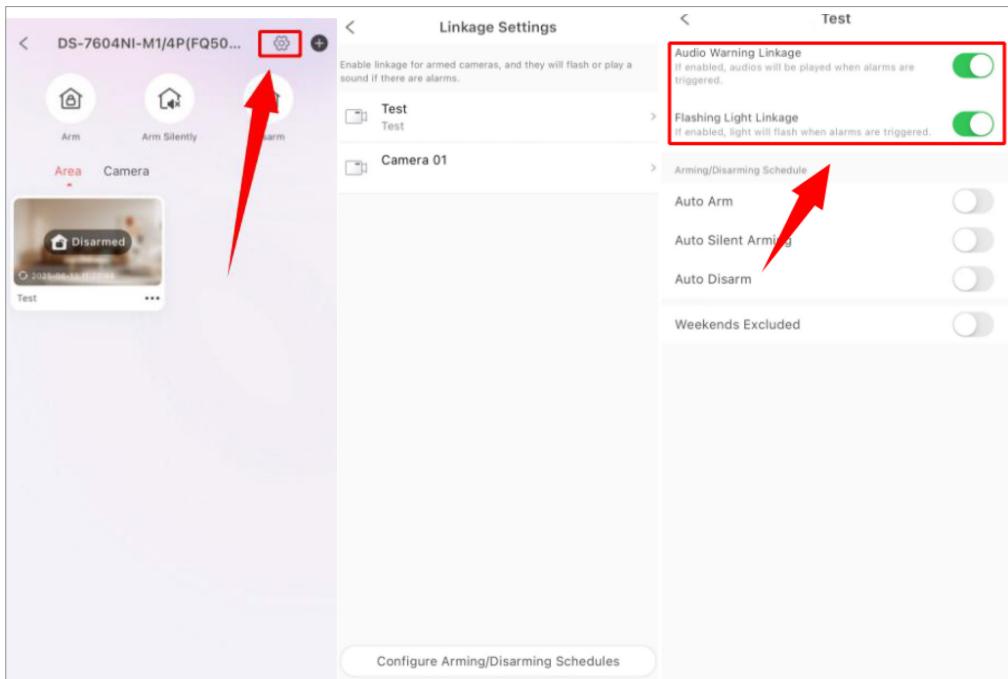

Step 9 (Auto Arm/Auto Disarm): We can set the arm/disarm schedule for different area via the APP.

1. Go to The linkage setting at Step 5.
2. Enable Auto Arm and Auto Disarm.
3. Set the time schedule.
4. The device will be armed and disarmed automatically based on the schedule we set.

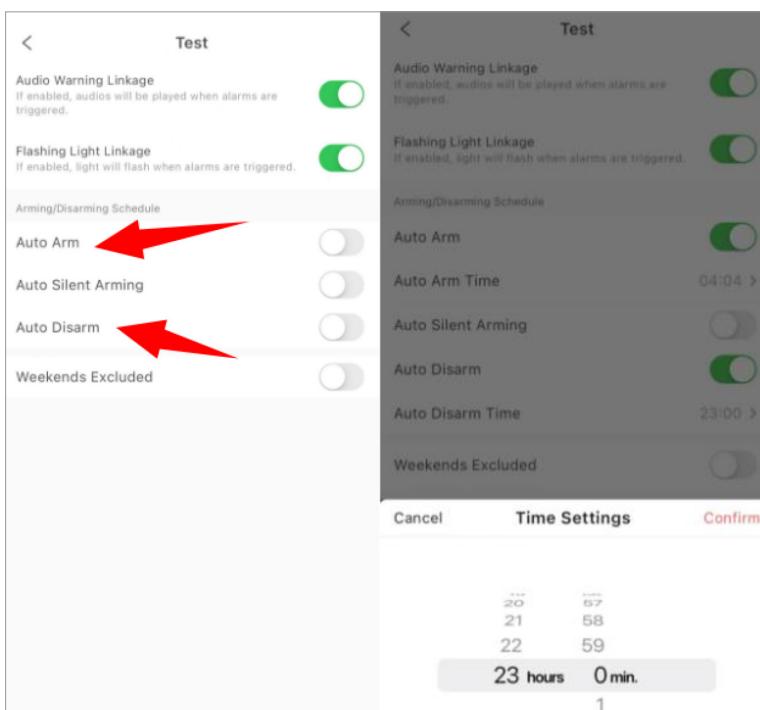

Result demonstration

Once all of the configurations done, the APP will receive notification and the camera device will start audible and flash light alarm when the System is set to armed and the Detection function is triggered.

HOW TO SET UP LIVE GUARD SOLUTION FOR NVR ALARM INPUT (LOCAL NVR GUI)

Function Explanation


Live Guard Function is used to notify the user when cctv detect any suspicious event by flash light alarm and send push notification to Hik-connect, This document will show how to set up Live guard solution for NVR Alarm Input.

Device type	Model	Version
Network Video Recorder	DS-7604NI-M1 / 4P	V5.04.065_build250530
IP Camera	DS-2CD2387G2H-LISU/SL	V5.7.19 build 241207


Configuration

Step 1: Wiring cables to ALARM INPUT1 and COM.


Step 2: Log in to the NVR local monitor, Go to Event Configuration.

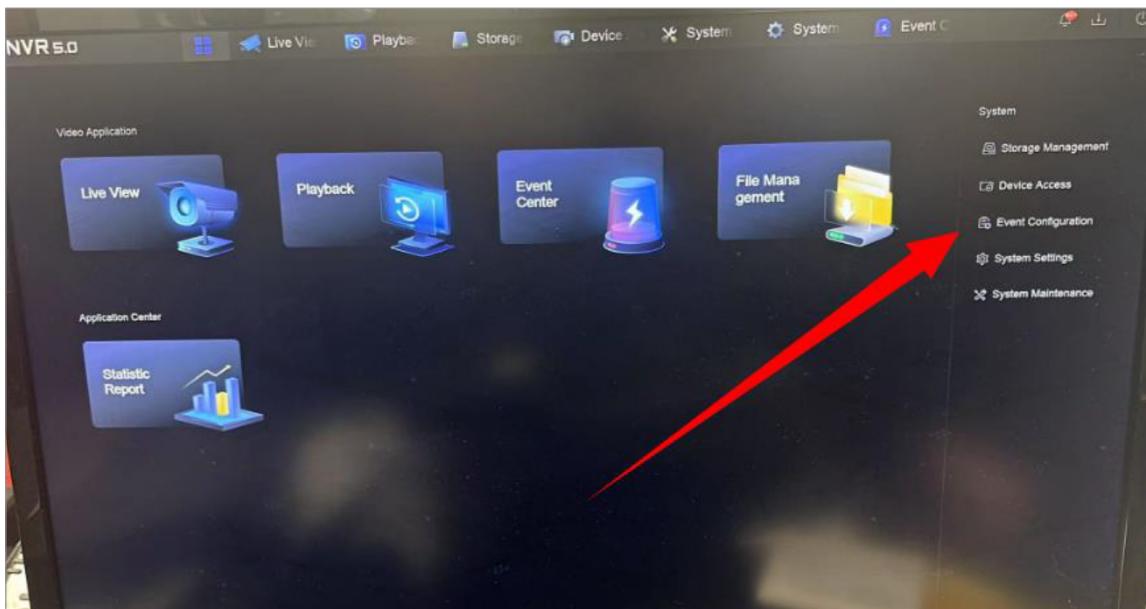

Step 3:

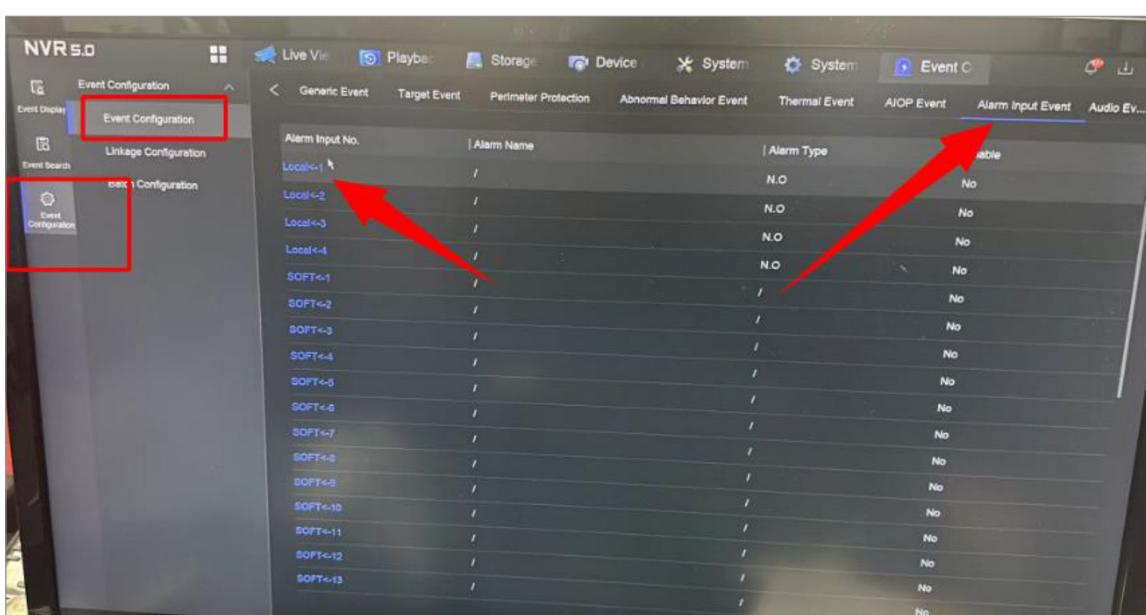

Step 4: Enable the Alarm Input and change processing method to '**Quick Disarming**'. Enable the '**Notify Surveillance Center**' and '**Light and Audio**' as well.

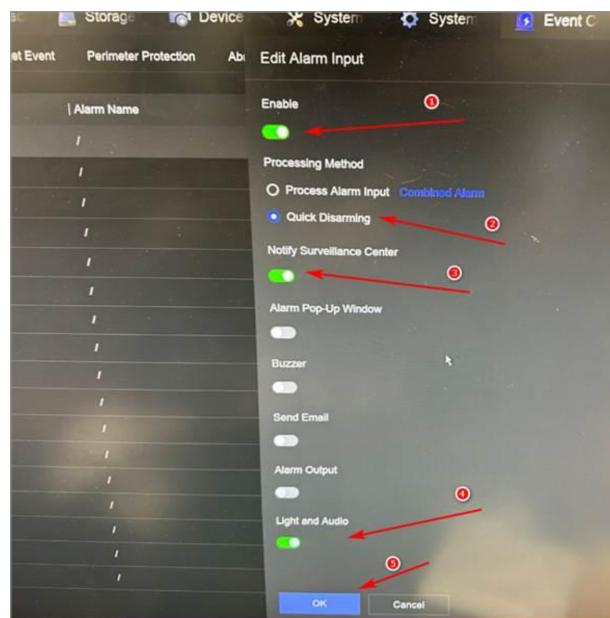

Result demonstration

To use alarm input function:

1. Make sure NVR is armed (NVR is on arm status by default).
2. When there is a signal in, NVR will process disarm function to disarm 'Notify Surveillance Center' and 'Audio and Light Alarm Linkage'.



SECURITY WHOLESALE



TECH SUPPORT

1300 976 305

vpsolutions.com.au

support@vpsolutions.com.au

ADELAIDE

30 Cawthorne St, Thebarton 5031
PH: 08 8354 4444

GOLD COAST

1/14 Indy Ct, Carrara QLD 4211
PH: 07 5596 0783

MELBOURNE

69A Matthews Avenue, Airport West 3042
Unit 9, 20 Duerdin St, Clayton 3168
PH: 03 9646 5340

PERTH

8/160 Balcatta Rd, Balcatta WA 6021
PH: 08 9345 3202

SYDNEY

7/19 Unwins Bridge Rd, St Peters 2044
PH: 02 9557 7946

SYDNEY DISTRIBUTION CENTRE

2/12 Sterling Rd, Minchinbury 2770
PH: 02 9557 7946